

PA SYSTEM



The Main Hall Public Address system (PA) has volume controls shown above.

To operate

- Turn all the Volume Controls to ZERO.
- If using handheld (cabled) microphone(s) plug in the cable(s) using a (black) socket at the back of the stage or on the floor at the front of the stage (by the steps).
- Attach any iPod type music device to the 3.5 mm plug
- Switch on the radio microphone (if used)
- Switch on the power using the marked switch located next to the volume controls shown above.
- Adjust the volumes to suit event.

'T' Hearing Loop

The Main Hall 'T' Hearing loop relays through the PA system and the PA power must be switched on.

Please turn off the power on the lapel microphone (if used) and on the wall when finished.